



FOCUSING THE OBJECTIVES

To change the focus for each eye, rotate the lenses to the desired setting.

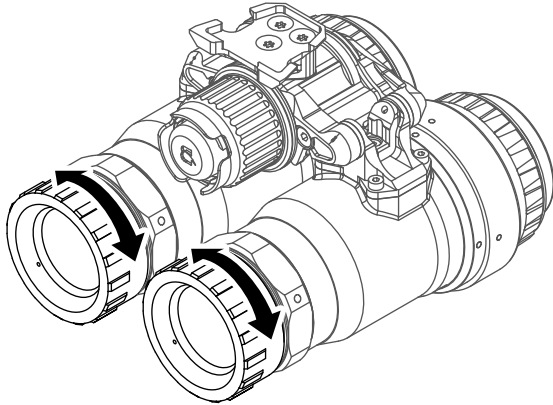

DIOPTER ADJUSTMENT


To change the diopter setting for each eye, rotate the diopter adjustment wheel to the desired point.

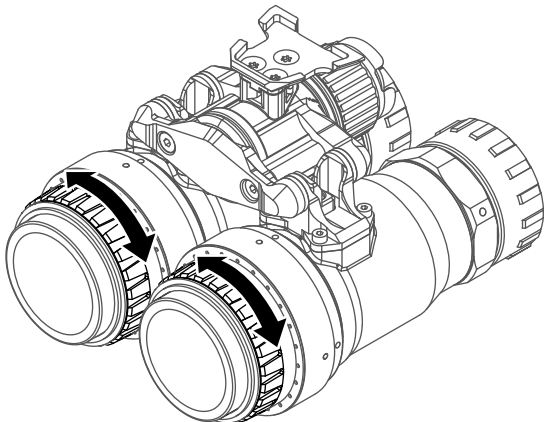


IPD ADJUSTMENT

The system includes an interpupillary distance (IPD) adjustment feature. Just rotate the IPD stop arm to your preferred setting, and the optical pod will stop automatically at that position.

Minimum IPD setting

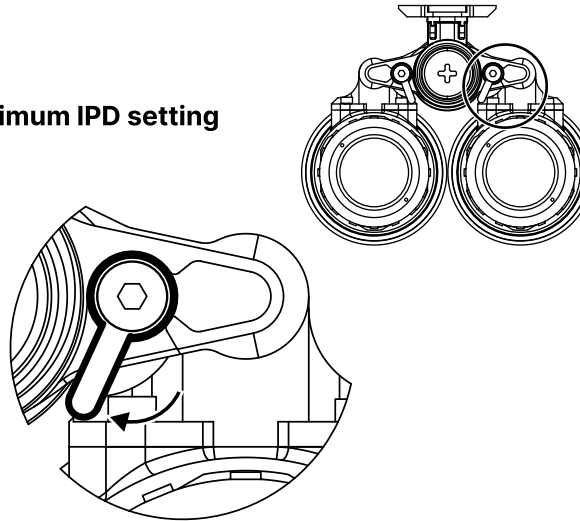


Maximum IPD Setting

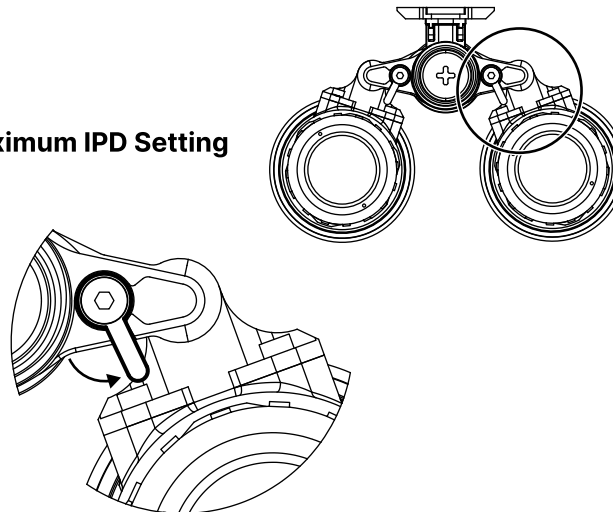



PROTON^{LITE}

ULTRA LIGHT MODULAR NIGHT VISION SYSTEM

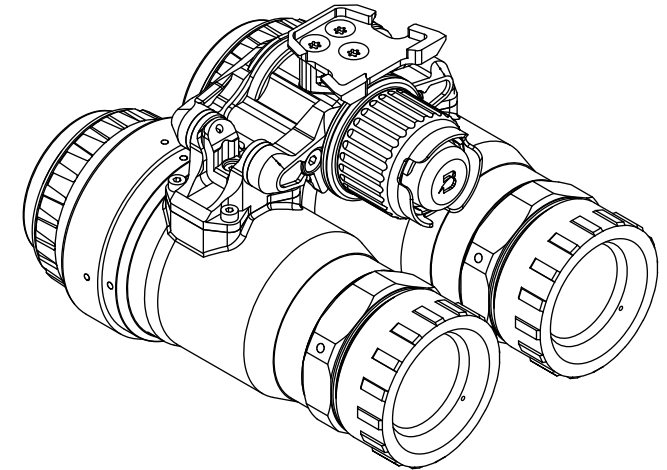

USER MANUAL


PRESENTATION

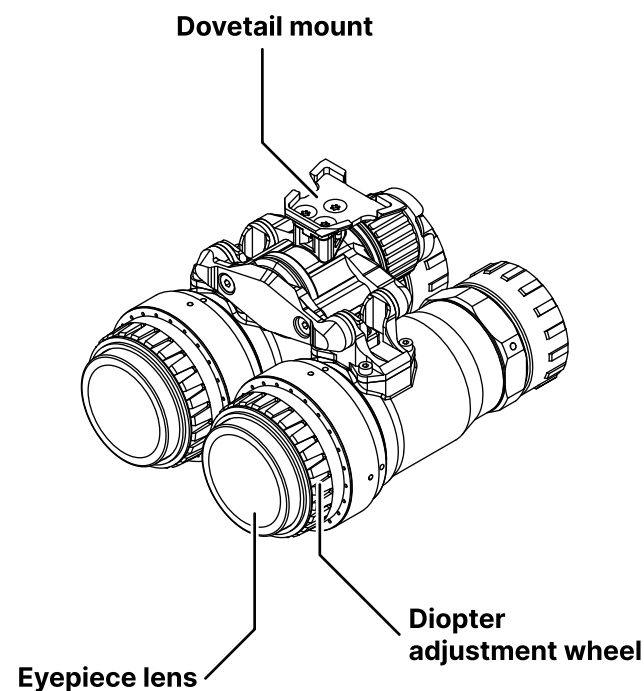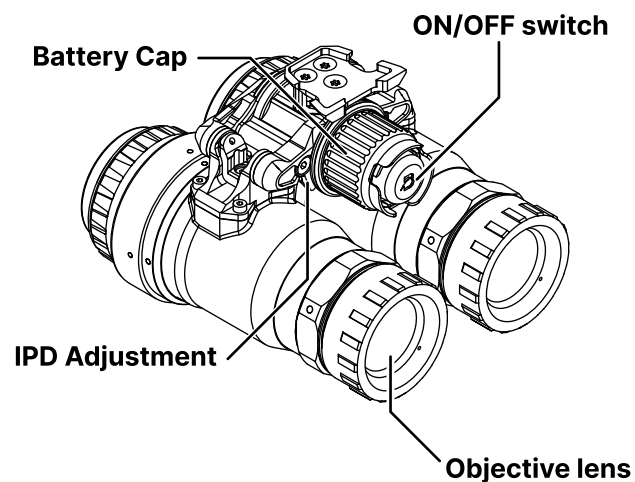


OPERATION

Unscrew the cap-switch and insert a CR123A battery, with the positive pole facing inward and the negative pole facing outward.

Replace the cap and tighten securely.

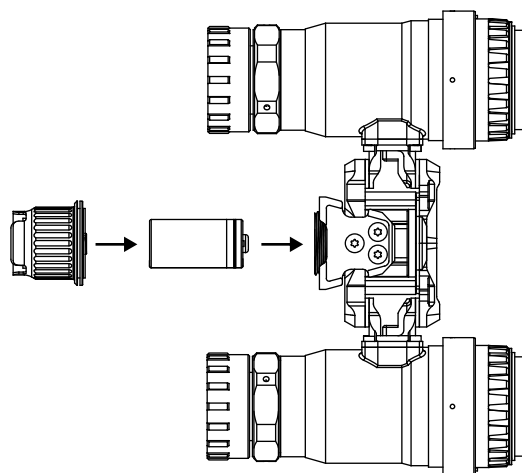

Press the power button to turn on, and press it again to turn off the device.

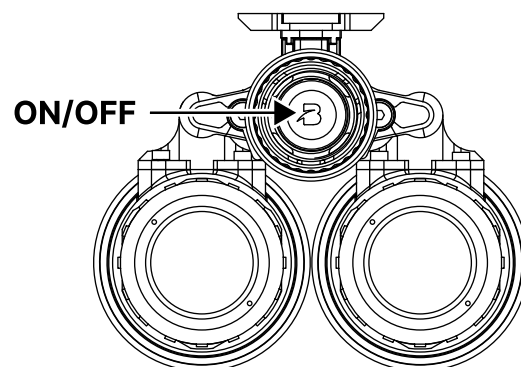

FLIP ON/OFF

The system features an automatic independent shutoff mechanism tied to the rotation angle of the optical pods, allowing for quick activation in operation.

